

# SIT-STAND STARTER DESK

## Installation Guide

 


### Technical data

Column Number	2
Maximum Load	70KG
Max Speed	25mm/s
Input Voltage	100-240V
Lowest Position	710mm
Highest Position	1210mm
Desktop Size	1000-1600mm 500-800mm
Duty Cycle	Continuous operation for 2 mins at most after pause for 18 mins
Applicable Temperature	0-40°C

### Accessory list


Attention: The drawings below are for reference purposes. If you have any problems, please contact customer service at [support@anthrodesk.ca](mailto:support@anthrodesk.ca) or watch our installation video on our AnthroDesk Youtube Channel (<https://anthrodesk.page.link/STRT-1>).

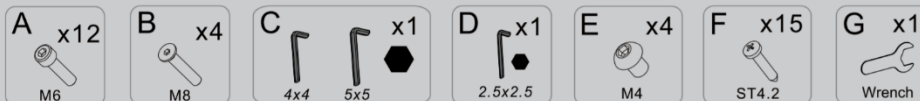

### Parts List


No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
①	Feet	2	②	Left leg	1	③	Right leg	1
④	Main Support Bar	1	⑤	Hex Rod	1	⑥	Sidebars	2
⑦	Control Box	1	⑧	Baffle	2	⑨	Power Cable	1
⑩	Cable tie	4	⑪	Control Box Holder	1			

### Installation Instructions

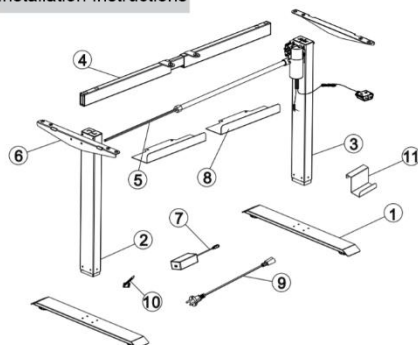

### STEP1


#### Install Feet(1)

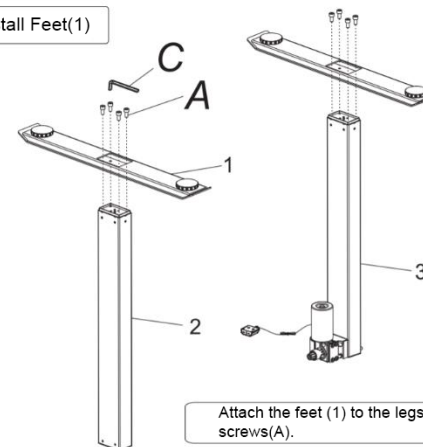


Attach the feet (1) to the legs (2 & 3), using the wrench (C) to tighten the screws(A).

### STEP2

#### Install Support Bar (4)

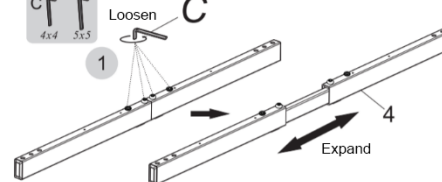

Loosen screws on support bar (4) using the wrench (C), and adjust its size as required.

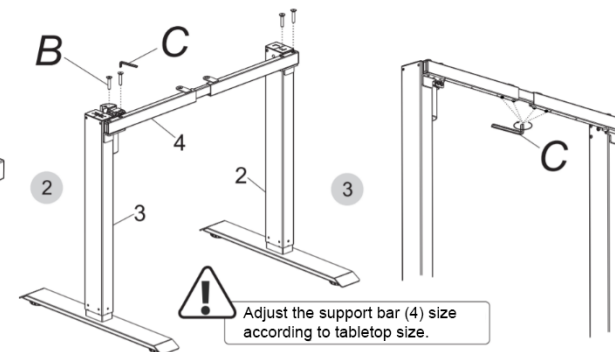


Install the support bar (4) on the legs (2 & 3) using the included screws (B) and wrench (C).

Tighten the screws on the support bar using the wrench.

### STEP3



#### Install hex rod (5)

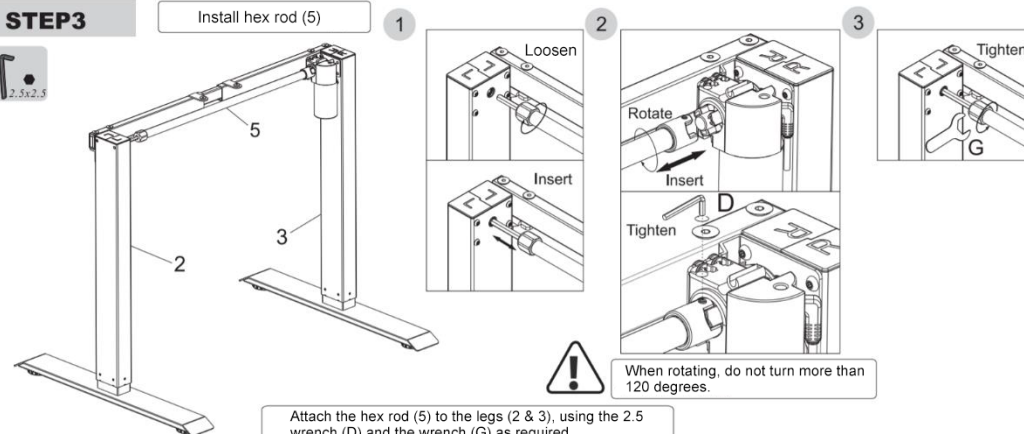

Attach the hex rod (5) to the legs (2 & 3), using the 2.5 wrench (D) and the wrench (G) as required.

#### STEP4

 
Install sidebars (6)

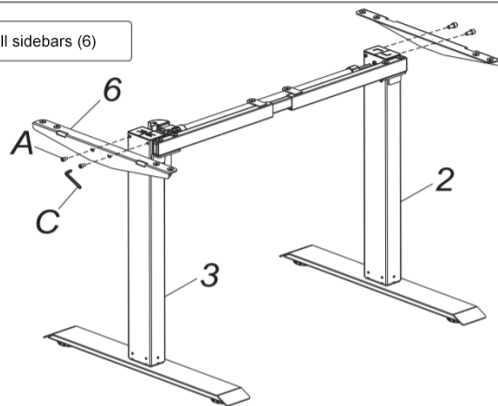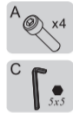

Attach sidebars (6) to the legs (2&3), use the wrench (C) to tighten the screws (A).


#### STEP5

Install Baffle(8)

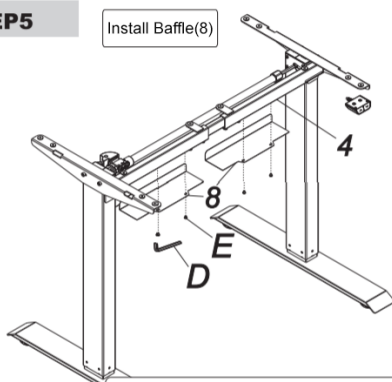

Attach baffle (8) to the support bar using the included screws (E) and the 2.5 wrench (D).


Install Control Box (7)

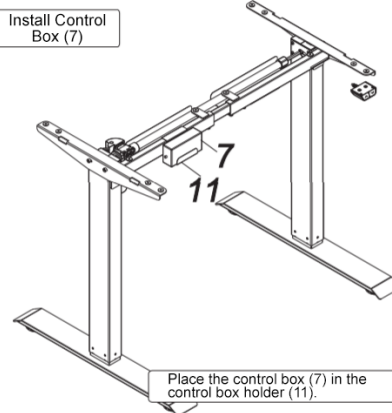

Place the control box (7) in the control box holder (11).

#### STEP6


Install tabletop

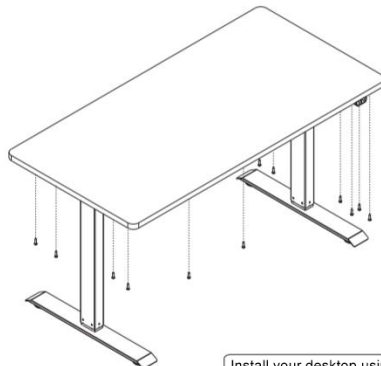

Install your desktop using the included screws (F), a drill is recommended for this step.

#### STEP7

Connect cables to the control box (7)

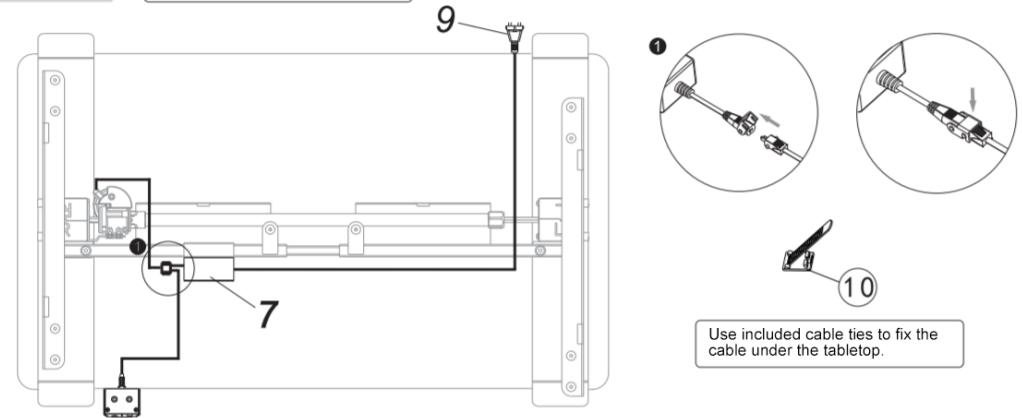

#### How to use the handset

●	“▲”	Adjust the desk upwards
●	“▼”	Adjust the desk downwards

#### Instructions


Press the UP or DOWN button to increase or decrease the height of the desk.

#### Common Issues

The tips below will help you identify common issues and how to fix them. If you are facing a different issue, please contact [support@anthrodesk.ca](mailto:support@anthrodesk.ca) or call us at 1-800-267-1783. If preferred, watch our installation video on our AnthroDesk Youtube Channel (<https://anthrodesk.page.link/STRT-1>).

Issue	Fix
No response when pressing a button.	1.- Check if all cables are well-connected 2.- Contact support
Desk does not go up	1.- Check if overloaded. Max. loading: 70kg. 2.- Contact support
Desk wobbles (It may wobble slightly on carpet)	1.- Check that all bolts are tightened correctly 2.- Contact support

#### Buttons

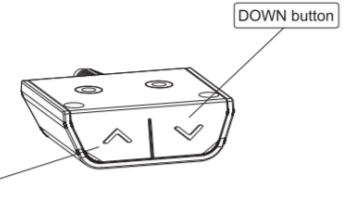

#### Attention

1. Power supply: AC100V~240V, 50/60Hz
2. Service Environment: 0-40°C
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on.
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. Please make sure there is no hazard sources in your operating environment, e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
11. Keep the original package of the equipment if necessary in case of the future use in transportation.
12. The following tips will help you detect and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable of investigating and correcting those fault and error.

#### Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.