


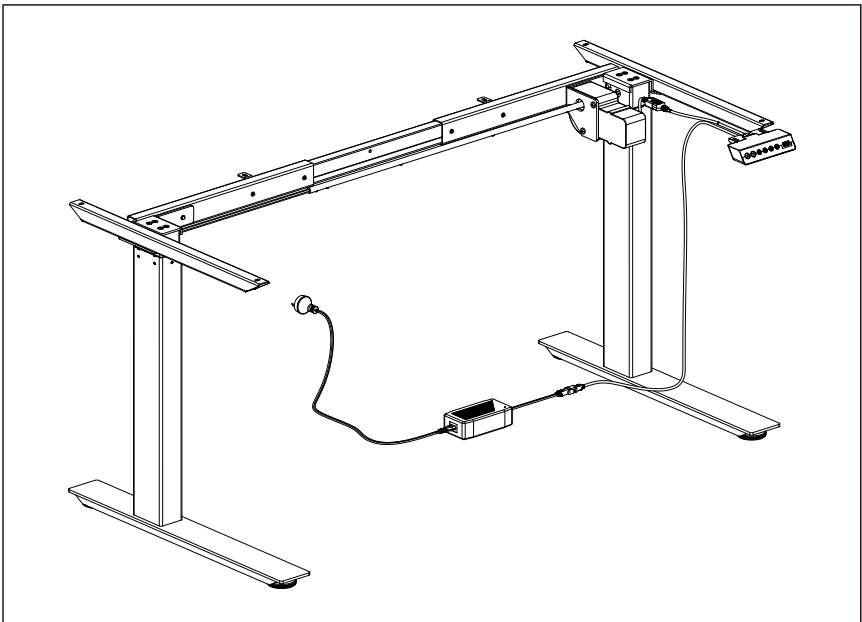

ASSEMBLY INSTRUCTIONS

MODEL: **AD-SMP-1**

Programmable Single Motor Standing Desk



WWW.ANTHRODESK.CA

1-800-267-1783

(Rev:181128)

Technical Specifications

Electric Control Part:

Input Voltage:100-240V can be use

Output Voltage:29V DC 1.8A

Duty cycle:10%MAX 2min on 18 min off

Switch power supply,low energy consumption

Desk frame:

Built-in limit switch

Dynamic load:80KG


The maximum static load:100KG

Load speed: 30mm/s

Safety and warnings



This appliance can be used by children aged from 8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Correct Disposal of this product

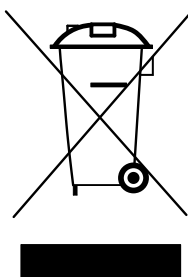


This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal ,recycle it responsibly to promote the sustainable reuse of material resources.To return your used device,please use the return and collection systems or contact the retailer where the product was purchased.They can take this product for environmental safe recycling.

 
Assembly Instructions

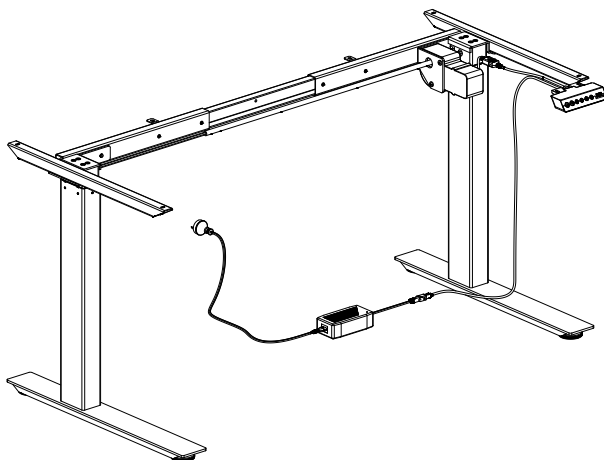


Left leg 1pcs ①

 

Right leg 1pcs ②

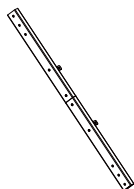


Long tube 1pcs ③

 

Side bar 2pcs ④



 Hex bar 1pcs ⑤




Feet 2pcs ⑥



Power Cord 1pcs ⑦



 Power Supply 1pcs ⑧



Handset 1pcs ⑨



M8*10 10pcs ⑩



M8*20 8pcs ⑪



ST4.2*16 2pcs ⑫




ST5.0*16 6pcs
for tabletop



M5




M2.5

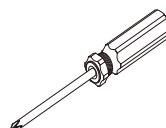


Assembly Instructions

1

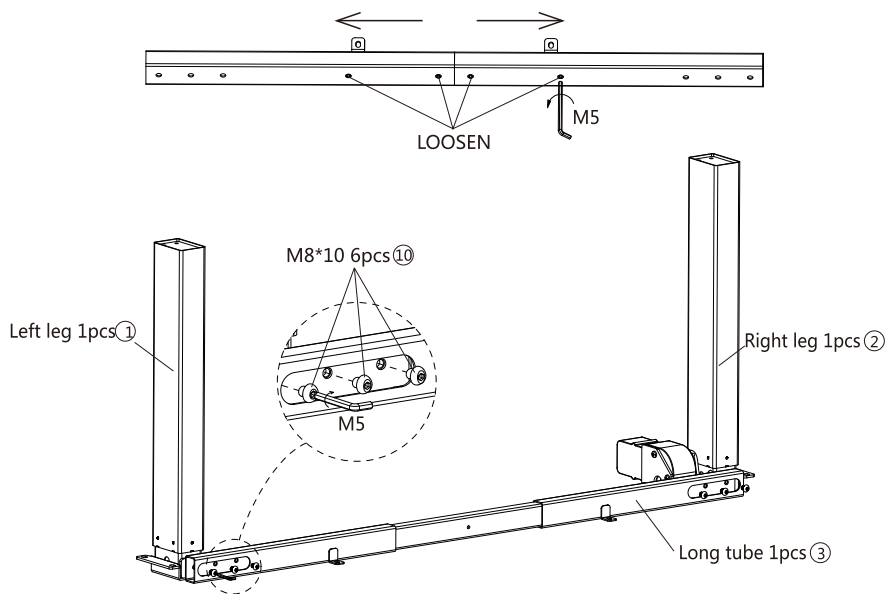


2

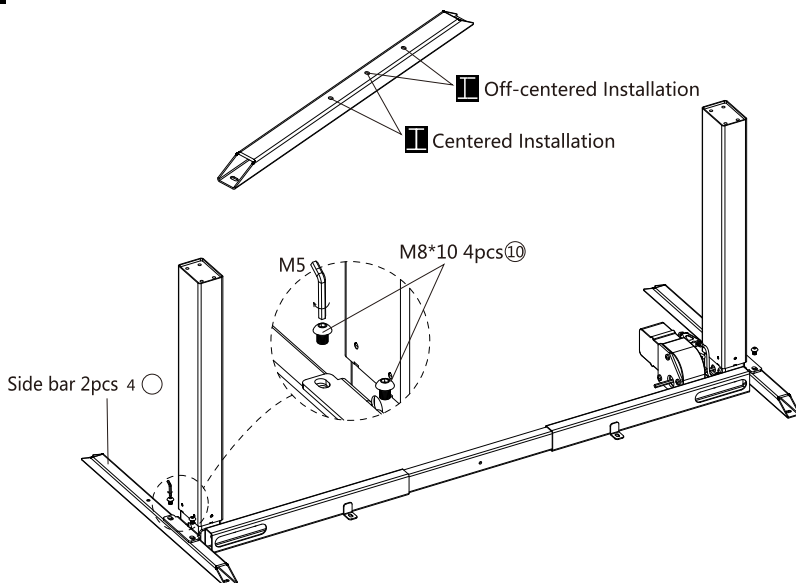


Assembly Instructions

3

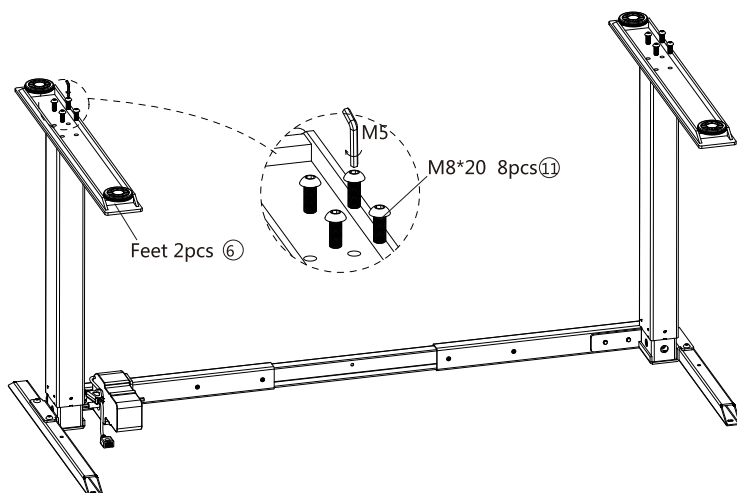


4

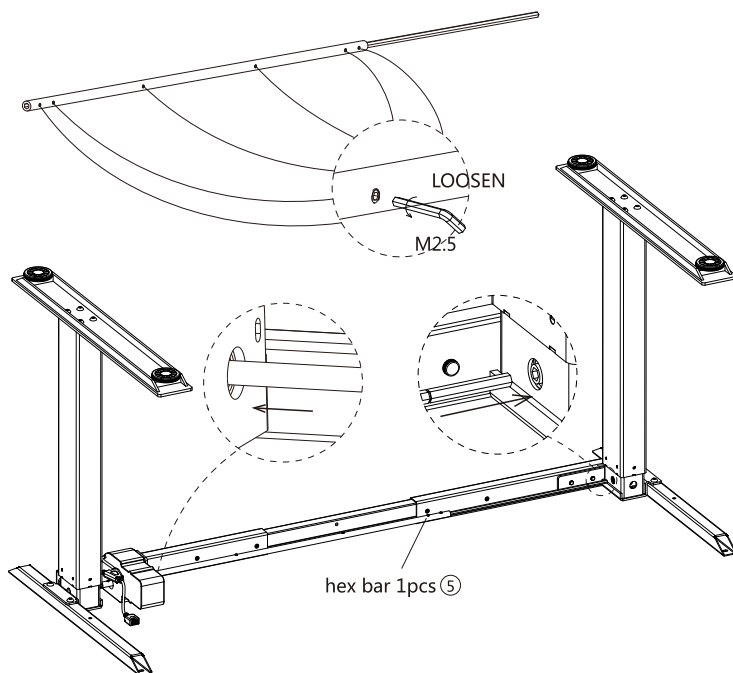


Assembly Instructions


5

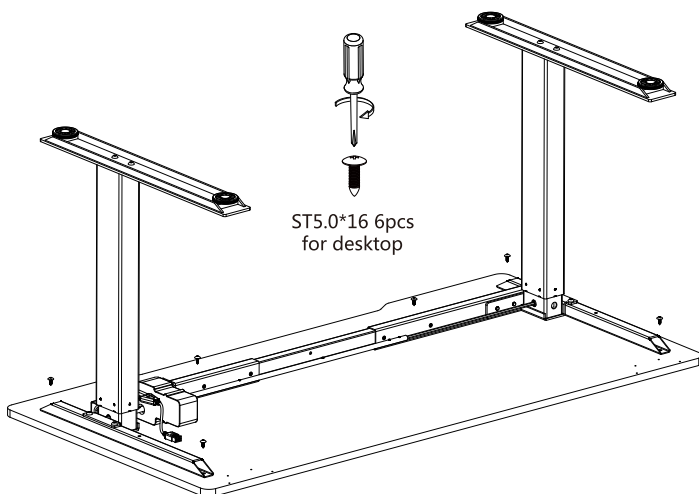


6

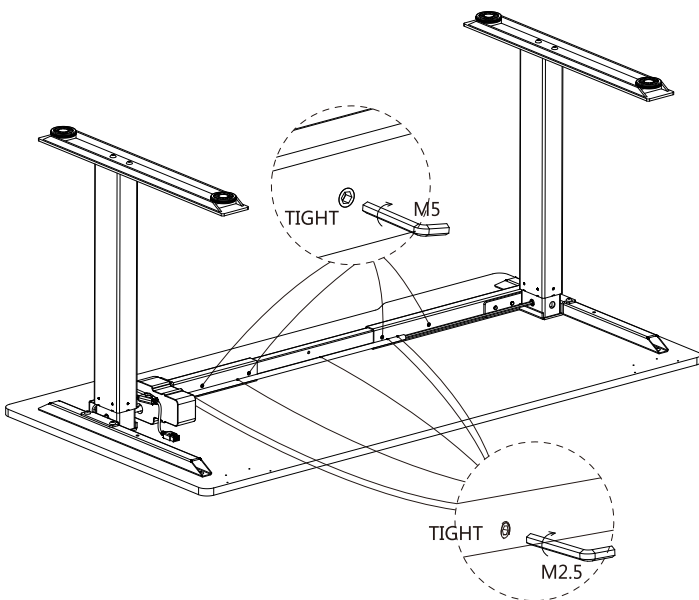

7

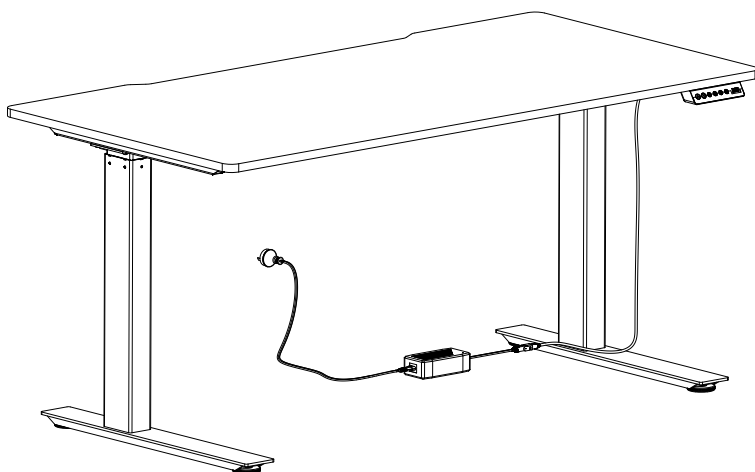

Handset Instructions

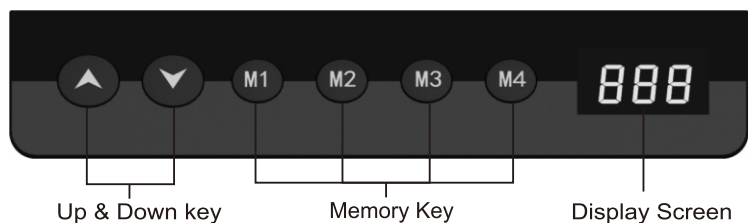

The whole handset surface is a button panel. If there is no press within 30 seconds, the screen is locked and M1/M2/M3/M4 keys are locked correspondingly, you should press Up or Down key first, it can be used when the display screen light up.

■ **Up or Down Key**

To adjust the height of the desk, keep pressing "up" or "down" until your desired position.

■ **Display screen**

Display the height value of the desk.

■ **Memory Key (M1/ M2/ M3/ M4)**

After setting memory keys, the desk can lift automatically to a saved preset.


※ How to set memory mode

Please hold the M1/M2/M3/M4 key for 5 seconds. Once you hear a "beep", the memory height will be successfully saved. Then press M1/M2/M3/M4, the desk will move to your saved height automatically.

■ **Collision Detection**

When the desktop is moving and encounters resistance, the desk will stop moving.

■ **Additional Adjustments**

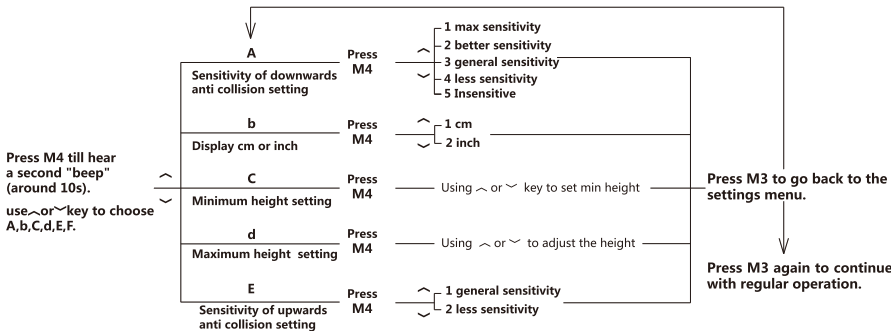

■ **Troubleshooting**

Error code	Problem	Solution
ER1	Motor error	Power off and restart. If problem continues, contact support.
ER5	Overload protection	Decrease load, power off and restart.
Hot	Exceeded motor operating values.	Decrease load and do not adjust desk height for 10 minutes. If problem continues, power off and restart.